

Benchstop Security Doors


HOW TO MEASURE A DOOR OPENING FOR YOUR BENCHSTOP STEEL DOOR / FIRE EXIT

Height

The height should be measured brick to brick at 3 points – left, middle and right of the opening.

The smallest of these measurements is taken as the height.

We will deduct 5mm from the measurement to determine the final height of the steel door frame to allow 5mm for fitting clearance.

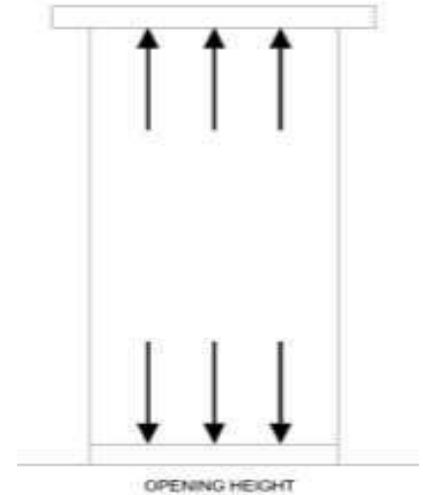


Width

The width should be measured brick to brick at 3 points – top, middle and bottom of the opening.

The smallest of these measurements is taken as the width.

We will deduct 10mm from the measurement to determine the final width of the steel door frame to allow 5mm clearance each side for fitting clearance.

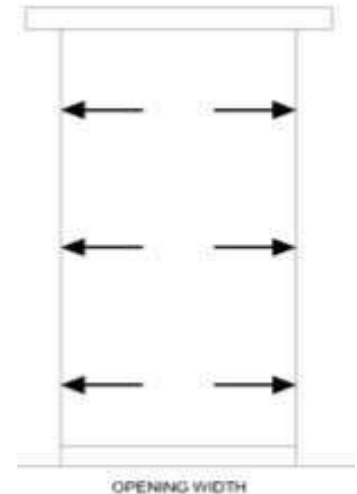

Measure the opening outside on both the height and width. Always measure the exact brickwork opening and not the old frame or door. All dimensions to be supplied in metric units.

Please remember:

Do not measure your existing door or frame but measure the structural brick opening.

Measure in at least three different places - we make any fitting allowances on the sizes you provide.

REMEMBER: NO ORDER WILL BE PROCESSED USING ONLINE INFORMATION ONLY – WE WILL CONTACT YOU TO DOUBLE CHECK YOUR ORDER REQUIREMENTS BEFORE PROCESSING MANUFACTURE.